

SAJ



GUANGZHOU SANJING ELECTRIC CO.,LTD




Tel: (86)20 66608588 Fax: (86)20 66608589 Web: www.saj-electric.com

Add: SAJ Innovation Park, No.9, Lizhishan Road, Science City, Guangzhou High-tech Zone, Guangdong, P.R.China

V0.1

SAJ

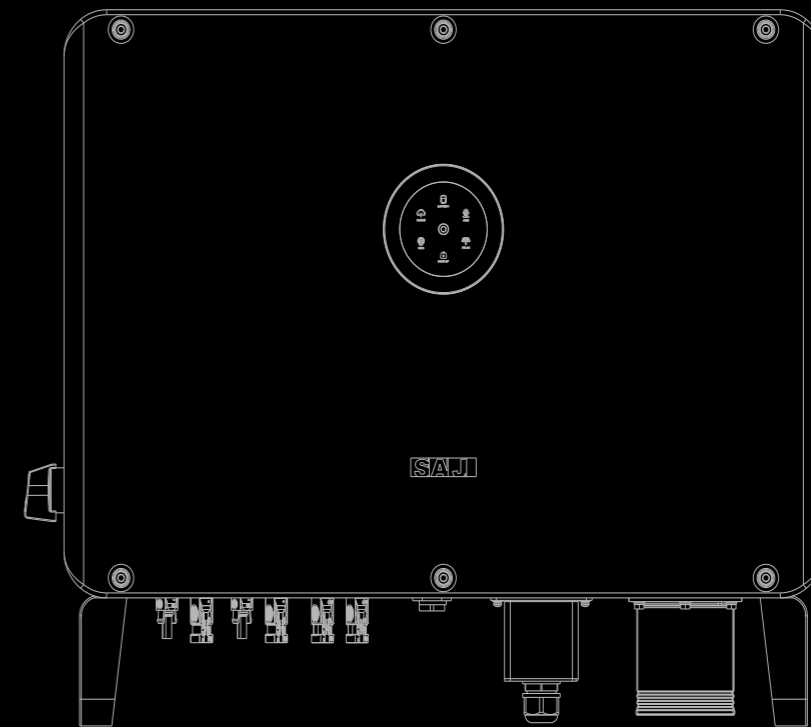

H2 Series

**SAJ HYBRID SOLAR INVERTER
USER MANUAL**

H2-(10K-30K)-(T2,T3)

Preface

Thank you for choosing SAJ products. We are pleased to provide you first-class products and exceptional service.

This manual includes information for installation, operation, maintenance, trouble shooting and safety. Please follow the instructions of this manual so that we can ensure delivery of our professional guidance and wholehearted service.

Customer-orientation is our forever commitment. We hope this document proves to be of great assistance in your journey for a cleaner and greener world.

Please check for the latest version at www.saj-electric.com.

Guangzhou Sanjing Electric Co., Ltd.



TABLE OF CONTENTS

1. SAFETY PRECAUTIONS	1
1.1 Scope of Application	2
1.2 Safety Instructions	2
1.3 Target Group	2
2. PREPARATION	3
2.1 Safety Instructions	4
2.2 Explanations Of Symbols	5
3. PRODUCT INFORMATION	7
3.1 Application Scope of Products	8
3.2 Specification for Product Model	8
3.3 Overview of Product	9
3.4 Terminals Description	9
3.5 Datasheet	11
4. INSTRUCTIONS FOR INSTALLATION	15
4.1 Unpacking and Inspection	16
4.1.1 Checking the Package	16
4.1.2 Scope of Delivery	16

4.2 Installation Method and Position	17
4.2.1 Installation Position and Clearance	17
4.2.2 Mounting Method	18
4.3 Mounting Procedure	19
4.3.1 Installation Tools	19
4.3.2 Mounting Procedure	20
5. ELECTRICAL CONNECTION	23
5.1 Additional Grounding Cable	24
5.2 AC Grid Wire and Backup Output Connection	25
5.2.1 Earth Fault Alarm	26
5.2.2 External AC Circuit Breaker and Residual Current Device	26
5.3 Communication Connection	27
5.4 Connecting Battery Power Cable	28
5.5 Battery Connection	29
5.6 PV Side Connection	30
5.6.1 PV Connector Assembly	31
5.7 Communication Module Installation	33
5.8 System Connection	34
5.9 System Connection Diagram	36
5.10 AFCI	36
6. COMMISSIONING	37
6.1 Start Up and Shut Down the Energy Storage System	38
6.1.1 Start Up	38
6.1.2 Shut Down	38
6.2 Introduction of Human-computer Interface	38
6.3 Installing the eSAJ Home App	40
6.4 Logging In to the App and Performing the Initialization Settings	40
6.5 Inverter Setting Review	44
6.6 Remote Monitoring	44

6.7 Working Modes	45
6.7.1 Selecting Working Modes Procedures.....	45
6.7.2 Working Modes Instruction.....	45
6.8 Export Limit Setting	46
6.8.1 APP Setting.....	47
6.9 Self-test (For Italy).....	47
6.10 Setting Reactive Power Control (For Australia)	49
6.10.1 Setup Fixed Power Factor Mode.....	49
6.10.2 Setup V-Watt and Volt-Var Mode.....	50
7. TRANSPORTATION and DISPOSAL	53
7.1 Transportation.....	54
7.2 Recycling and Disposal.....	54
8. ROUTINE MAINTENANCE.....	55
9. TROUBLESHOOTING and WARRANTY	57

1.1 Scope of Application

This User Manual describes instructions and detailed procedures for installing, operating, maintaining, and troubleshooting of the following SAJ products:

H2-10K-T3; H2-12K-T3; H2-15K-T2; H2-15K-T3; H2-20K-T2; H2-20K-T3; H2-25K-T3-BE; H2-25K-T3; H2-30K-T3-DE; H2-30K-T3

1.2 Safety Instructions



DANGER

· DANGER indicates a hazardous situation which, if not avoided, will result in death or serious injury.



WARNING

· WARNING indicates a hazardous situation which, if not avoided, can result in death or serious injury or moderate injury.



CAUTION

· CAUTION indicates a hazardous condition which, if not avoided, can result in minor or moderate injury.



NOTICE

· NOTICE indicates a situation that can result in potential damage, if not avoided.

1.3 Target Group

Only qualified electricians who have read and fully understood all safety regulations in this manual can perform installation and maintenance. Operators must be aware of the high-voltage device.

SAFETY PRECAUTIONS



2.

PREPARATION



2.1 Safety Instructions


For safety, be sure to read all the safety instructions carefully prior to any works, and please observe the appropriate rules and regulations of the country or region where you installed the energy storage system.

 **DANGER**

- There is possibility of dying due to electrical shock and high voltage.
- Do not touch the operating component of the inverter; it might result in burning or death.
- To prevent risk of electric shock during installation and maintenance, please make sure that all AC and DC terminals are plugged out.
- Do not touch the surface of the equipment while the housing is wet, otherwise, it might cause electrical shock.
- Do not stay close to the equipment while there are severe weather conditions including storm, lightning, etc.
- Before opening the housing, the SAJ inverter must be disconnected from the grid and PV generator; you must wait for at least five minutes to let the energy storage capacitors completely discharged after disconnecting from power source.

 **WARNING**

- The installation, service, recycling and disposal of the inverters must be performed by qualified personnel only in compliance with national and local standards and regulations.
- Any unauthorized actions including modification of product functionality of any form may cause lethal hazard to the operator, third parties, the units or their property. SAJ is not responsible for the loss and these warranty claims.
- The SAJ inverter must only be operated with PV generator. Do not connect any other source of energy to the SAJ inverter.
- Be sure that the PV generator and inverter are well grounded in order to protect properties and persons.










 **CAUTION**


- The inverter will become hot during operation. Please do not touch the heat sink or peripheral surface during or shortly after operation.
- Risk of damage due to improper modifications.

 **NOTICE**

- The inverter is designed to feed AC power directly to the public utility power grid; do not connect AC output of the inverter to any private AC equipment.

2.2 Explanations of Symbols

Symbol	Description
	Dangerous electrical voltage This device is directly connected to public grid, thus all work to the battery shall only be carried out by qualified personnel.
	No open flames Do not place or install near flammable or explosive materials.
	Danger of hot surface The components inside the inverter will release a lot of heat during operation. Do not touch metal plate housing during operating.
	Attention Install the product out of reach of children
	An error has occurred Please go to Chapter 7 "Troubleshooting" to remedy the error.
	This device shall NOT be disposed of in residential waste
	This battery module shall NOT be disposed of in residential waste
	CE Mark Equipment with the CE mark fulfills the requirements of the Low Voltage Directive and Electro Magnetic Compatibility.
	Recyclable

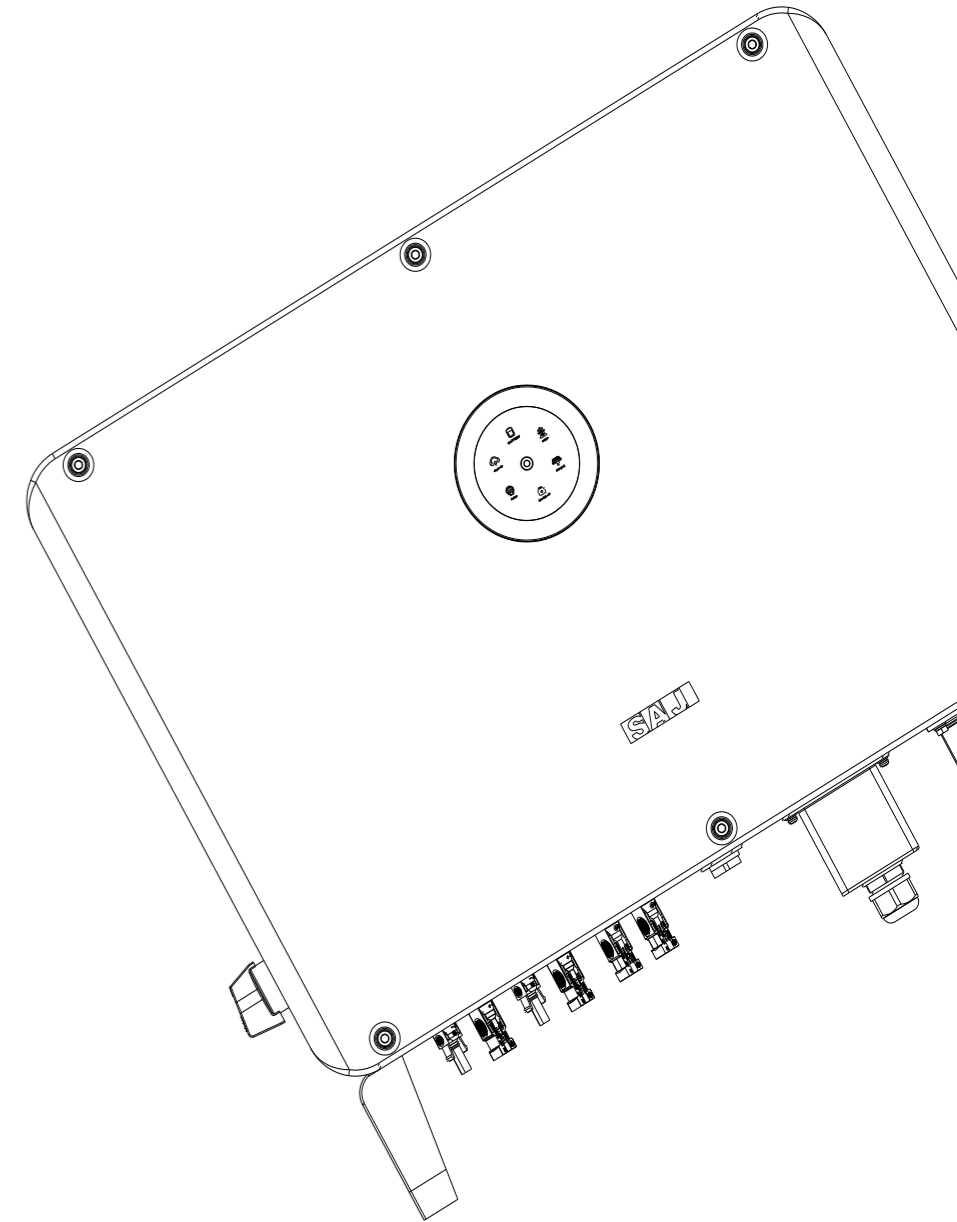

3.

PRODUCT INFORMATION



3.1 Application Scope of Products

H2 series is a hybrid photovoltaic inverter and it is applicable to both on-grid and off-grid solar systems. The energy generated by PV system will be fed to loads first, and then the surplus energy can charge the battery for later use, if there is still excess more energy, it will be exported to the grid. H2 inverter can significantly improve the self-consumption rate of solar energy and lower the dependency on grid.

3.2 Specification for Product Model

H2 - XK - TX - BE/DE

① ② ③ ④

- ① H2 represents for product name.
- ② XK represents rated energy XkW of inverter, for example, 15K means 15kW.
- ③ T means three phase; X represents the inveter has the function of X MPP trackers
- ④ BE indicates this model is ONLY applicable to Belgium; DE indicates this model is ONLY applicable to Germany

3.3 Overview of Product

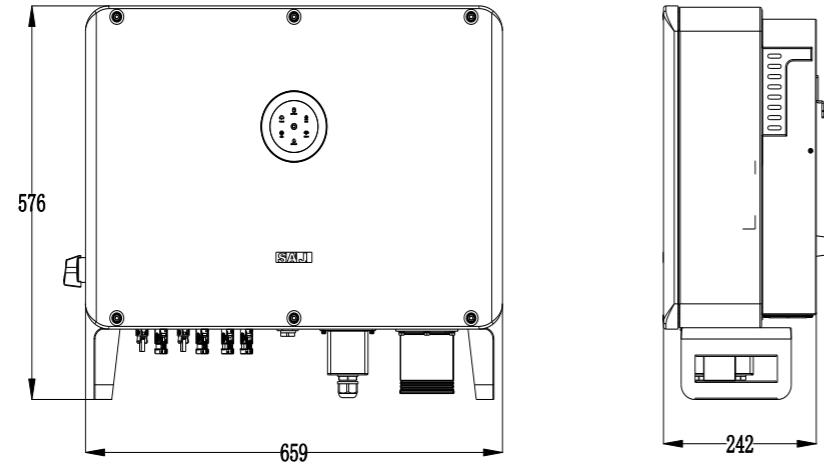


Figure 3.1
Dimensions of inverter

3.4 Terminals Description

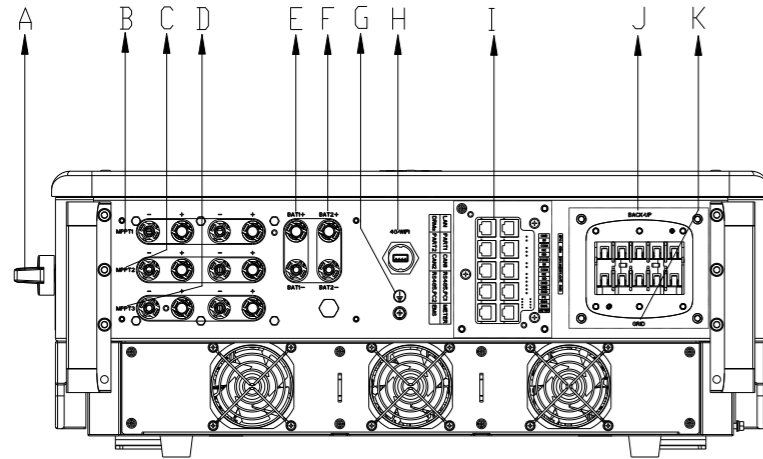


Figure 3.2
Electrical interface of H2 Inverter

Code	Name
A	DC Switch
B	PV1 Input
C	PV2 Input
D	PV3 Input
E	Battery1 Input
F	Battery2 Input
G	Ground Connection
H	4G/ Wi-Fi
I	BMS/ CAN/ EMS/ METER/ DRM
J	Backup
K	Grid

Table 3.1
Terminals description

3.5 Datasheet

Model	H2-10K-T3	H2-12K-T3	H2-15K-T2	H2-15K-T3	H2-20K-T2
DC Input					
Max. PV Array Power [Wp]@STC	20000	24000	30000	30000	30000
Max. DC Voltage [V]	1000				
MPPT Voltage Range [V]	180~900				
Rated DC Voltage [V]	600				
Start Voltage [V]	180				
Max. DC Input Current [A]	40/40/40		40/40	40/40/40	40/40
Max. DC Short Circuit Current [A]	50/50/50		50/50	50/50/50	50/50
No. of MPPT	3		2	3	2
Number of String per MPP Tracker	2/2/2		2/2	2/2/2	2/2
Battery Parameters					
Battery Type	LiFePO4				
Battery Voltage Range [V]	180~800				
Max. Charging/Discharging Current [A]	2*50				
AC Output [On-grid]					
Rated AC Power [W]	10000	12000	15000	15000	20000
Max. Apparent Power [VA]	11000	13200	16500	16500	22000
Rated Output Current [A]@230Vac	14.5	17.4	21.8	21.8	29.0
Max. AC Output Current to Utility Grid [A]	16.0	19.2	24.0	24.0	31.9
Rated AC Voltage/Range [V]	3+N+PE, 220/380, 230/400, 240/415; 180 ~ 280/312 ~ 485				
Rated Output Frequency/Range [Hz]	50,60/45~55,55~65				
Power Factor [cos φ]	0.8 leading ~ 0.8 lagging				
Total Harmonic Distortion [THDi]	<3%				
AC Input [On-grid]					
Rated AC Voltage/Range [V]	3+N+PE, 220/380, 230/400, 240/415; 180 ~ 280/312 ~ 485				
Rated Input Frequency [Hz]	50,60				
Max. Input Current [A]@230Vac	28.3	28.3	28.3	28.3	37.7
AC Output [Back-up]					
Max. Output Power [VA]	10000	12000	15000	15000	20000
Max. Output Current [A]	14.5	17.4	21.8	21.8	29.0
Peak Output Apparent Power [VA]	15000,3S	18000,3S	22500,3s	22500,3s	30000,3s
Rated AC Voltage/Range [V]	3+N+PE, 220/380, 230/400, 240/415; 180 ~ 280/312 ~ 485				

Model	H2-10K-T3	H2-12K-T3	H2-15K-T2	H2-15K-T3	H2-20K-T2
Rated Output Frequency/Range [Hz]	50,60/45 ~ 55,55 ~ 65				
Output THDv (@ Linear Load)	<3%				
Efficiency					
Max. Efficiency	98.0%				
Euro Efficiency	97.6%				
Protection					
Battery Input Reverse Polarity Protection	Integrated				
Over Load Protection	Integrated				
AC Short Circuit Current Protection	Integrated				
DC Surge Protection	Type II				
AC Surge Protection	Type II				
Anti-islanding Protection	Integrated				
AFCI Protection	Integrated				
Interface					
PV Connection	D4,MC4 (Optional)				
AC Connection	Terminal Block				
Battery Connection	Quick connector				
Display	LED+APP				
Communication	Wi-Fi/Ethernet/4G(Optional)				
General Parameters					
Topology	Non-isolated				
Operating Temperature Range	-40°C to +60°C (45°C and above with derating)				
Cooling Method	Intelligent Fan cooling				
Ambient Humidity	0~100% Non-condensing				
Altitude	4000m (>3000m Power Derating)				
Noise [dBA]	<50				
Ingress Protection	IP65				
Dimensions [H*W*D] [mm]	576*659*242				
Weight [kg]	50				
Warranty [Year]	Refer to the warranty policy				
Standard	EN 62109-1/2, EN 61000-6-2/4, EN 50438, EN 50549, C10/11, IEC 62116, IEC 61727, RD 1699, RD 413, UNE 206006, UNE 206007, NTS, CEI 0-16, CEI 0-021, AS 4777.2, NBR 16149, NBR 16150 VDE-AR-N 4105, VDE 0126-1-1				

Model	H2-20K-T3	H2-25K-T3-BE	H2-25K-T3	H2-30K-T3-DE	H2-30K-T3
DC Input					
Max. PV Array Power [Wp]@STC	40000	45000	45000	45000	45000
Max. DC Voltage [V]	1000				
MPPT Voltage Range [V]	180~900				
Rated DC Voltage [V]	600				
Start Voltage [V]	180				
Max. DC Input Current [A]	40/40/40				
Max. DC Short Circuit Current [A]	50/50/50				
No. of MPPT	3				
Number of String per MPP Tracker	2/2/2				
Battery Parameters					
Battery Type	LiFePO4				
Battery Voltage Range [V]	180~800				
Max. Charging/Discharging Current [A]	2*50				
AC Output [On-grid]					
Rated AC Power [W]	20000	25000	25000	29999	30000
Max. Apparent Power [VA]	22000	25000	27500	29999	33000
Rated Output Current [A]@230Vac	29.0	36.3	36.3	43.4	43.5
Max. AC Output Current to Utility Grid [A]	31.9	36.3	39.9	43.4	47.9
Rated AC Voltage/Range [V]	3+N+PE, 220/380, 230/400, 240/415; 180 ~ 280/312 ~ 485				
Rated Output Frequency/Range [Hz]	50,60/45~55,55~65				
Power Factor [cos φ]	0.8 leading ~ 0.8 lagging				
Total Harmonic Distortion [THDi]	<3%				
AC Input [On-grid]					
Rated AC Voltage/Range [V]	3+N+PE, 220/380, 230/400, 240/415; 180 ~ 280/312 ~ 485				
Rated Input Frequency [Hz]	50,60				
Max. Input Current [A]@230Vac	37.7	47.2	47.2	56.5	56.6
AC Output [Back-up]					
Max. Output Power [VA]	20000	25000	25000	29999	30000
Max. Output Current [A]	29.0	36.3	36.3	43.4	43.5
Peak Output Apparent Power [VA]	30000,3s	37500,3s	37500,3s	45000,3s	45000,3s
Rated AC Voltage/Range [V]	3+N+PE, 220/380, 230/400, 240/415; 180 ~ 280/312 ~ 485				
Rated Output Frequency/Range [Hz]	50,60/45 ~ 55,55 ~ 65				

Model	H2-20K-T3	H2-25K-T3-BE	H2-25K-T3	H2-30K-T3-DE	H2-30K-T3
Output THDv (@ Linear Load)	<3%				
Efficiency					
Max. Efficiency	98.0%				
Euro Efficiency	97.6%				
Protection					
Battery Input Reverse Polarity Protection	Integrated				
Over Load Protection	Integrated				
AC Short Circuit Current Protection	Integrated				
DC Surge Protection	Type II				
AC Surge Protection	Type II				
Anti-islanding Protection	Integrated				
AFCI Protection	Integrated				
Interface					
PV Connection	D4,MC4 (Optional)				
AC Connection	Terminal Block				
Battery Connection	Quick connector				
Display	LED+APP				
Communication	Wi-Fi/Ethernet/4G(Optional)				
General Parameters					
Topology	Non-isolated				
Operating Temperature Range	-40°C to +60°C (45°C and above with derating)				
Cooling Method	Intelligent Fan cooling				
Ambient Humidity	0~100% Non-condensing				
Altitude	4000m (>3000m Power Derating)				
Noise [dBA]	<50				
Ingress Protection	IP65				
Dimensions [H*W*D] [mm]	576*659*242				
Weight [kg]	50				
Warranty [Year]	Refer to the warranty policy				
Standard	EN 62109-1/2, EN 61000-6-2/4, EN 50438, EN 50549, C10/11, IEC 62116, IEC 61727, RD 1699, RD 413, UNE 206006, UNE 206007, NTS, CEI 0-16, CEI 0-021, AS 4777.2, NBR 16149, NBR 16150 VDE-AR-N 4105, VDE 0126-1-1				

4.

INSTRUCTIONS FOR INSTALLATION



4.1 Unpacking and Inspection





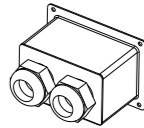





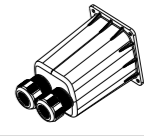






4.1.1 Checking the Package

Although SAJ's products have thoroughly tested and checked before delivery, there is possibility that the products may suffer damages during transportation. Please check the package for any obvious signs of damage, and if such evidence is present, do not open the package and contact your dealer as soon as possible

4.1.2 Scope of Delivery

Please contact after sales if there are missing or damaged components.

Inverter Package

					
H2 Inverter*1	Hexagon Philips bolt group M5*12 5PCS	PV terminal T3*6*2 T2*4*2	Pluggable terminal block 2pin*2 3pin*1 6pin*1	Waterproof communication terminal block*1	Rear Panel*1
					
Battery terminal 2*2	AC terminal*10	M6*50 screw suite*4	eSolar AIO3*1	Waterproof AC terminal block*1	Smart meter*1
					
Current transformer*3	Meter COMM cable*1 (10m)	Documents	RJ45 plug*10	M5 non-slip nut*10	

The documents include the user manual and packaging list.

4.2 Installation Method and Position

4.2.1 Installation Position and Clearance

This device is cooled by natural convection and suggested an indoor installation or an installation under a sheltered place to prevent the product from exposure to direct sunlight, rain and snow erosion.

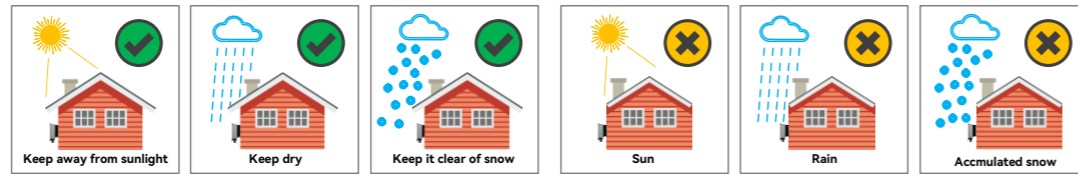


Figure 4.1
Installation location

Please reserve enough clearance around the product to ensure a good air circulation at the installation area. Because poor air ventilation will affect the working performance of internal electronic components and shorten the service life of the system.

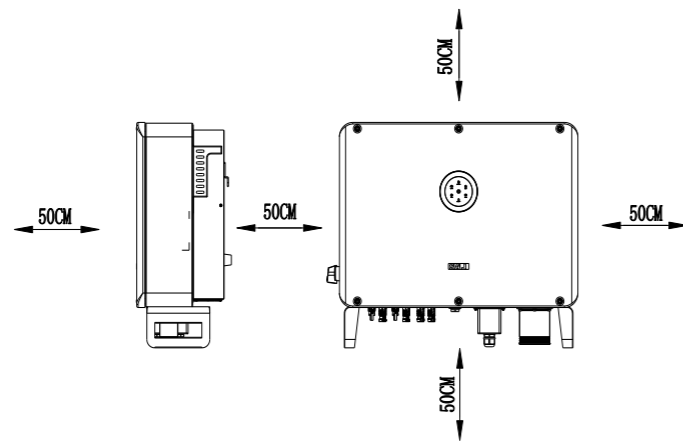


Figure 4.2
Installation clearance

4.2.2 Mounting Method

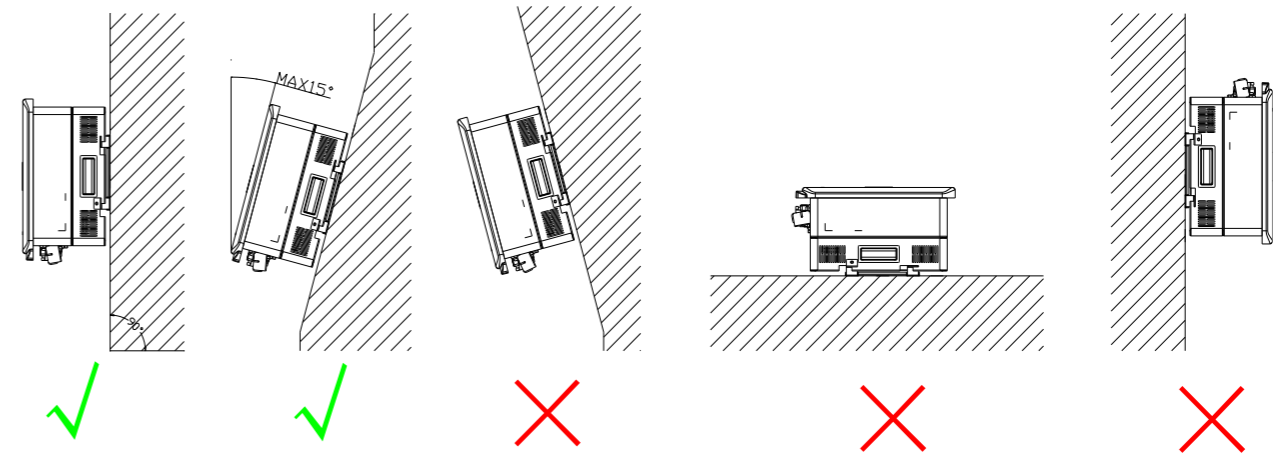


Figure 4.3
Mounting method

- ① The equipment employs natural convection cooling, and it can be installed indoor or outdoor.
- ② Mount vertically. Never install the device tilted forwards, sideways, horizontally or upside down.
- ③ When mounting the device, please consider the solidity of wall for product, including accessories, make sure the wall has enough strength to hold the screws and bear the weight of products. Please ensure the mounting bracket mounted tightly.

Installation Environment Requirements

- The installation environment must be free of inflammable or explosive materials.
- Install the device away from heat source.
- Do not install the device at a place where the temperature changes extremely.
- Keep the device away from children.
- Do not install the device at daily working or living areas, including but not limited to the following areas: bedroom, lounge, living room, study, toilet, bathroom, theater and attic.


- When installing the device at the garage, please keep it away from drive way.
- Keep the device from water sources such as taps, sewer pipes and sprinklers to prevent water seepage.
- The product is to be installed in a high traffic area where the fault is likely to be seen.

Note: When installing outdoors, the height of the device from the ground should be considered to prevent the device from soaking in water. The specific height is determined by the site environment.

4.3 Mounting Procedure

4.3.1 Installation Tools

Installation tools include but are not limited to the following recommended ones. Please use other auxiliary tools on site if necessary.

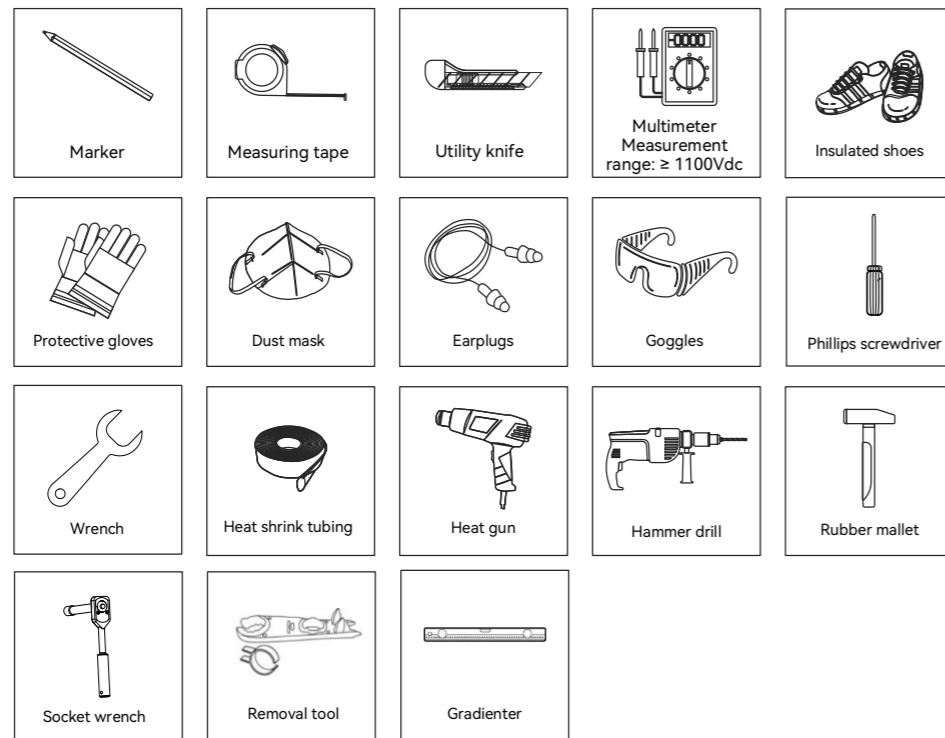

4.3.2 Mounting Procedures

1. Mark the Positions of the Drill Holes on the Rear Panel

Place the wall bracket horizontally against the wall with a gradienter, mark the position of holes with a marker.

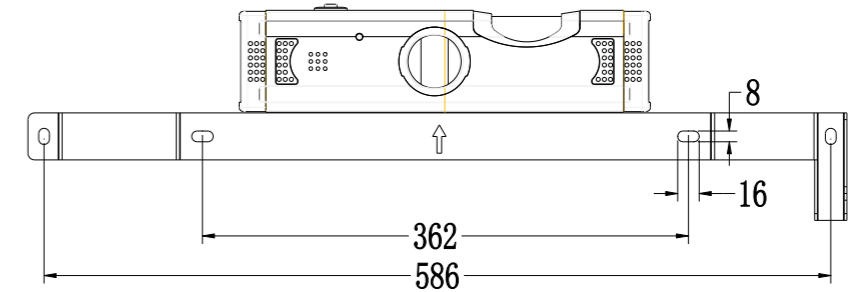


Figure 4.4
Mark positions

2. Drill Holes and Place the Expansion Tubes

Drill 4 holes in the wall (in conformity with the position marked in Figure 4.5), and then place expansion tubes in the holes using a rubber mallet.

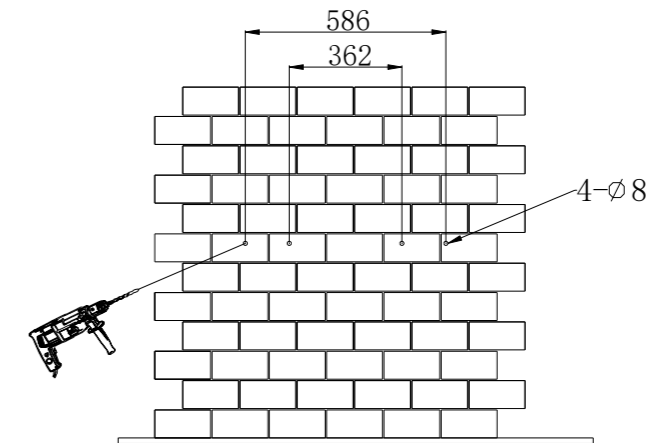


Figure 4.5
Drill holes for installation

3. Fix the mounting plate to the wall. (M6*50mm screw; 10-12 N·m)

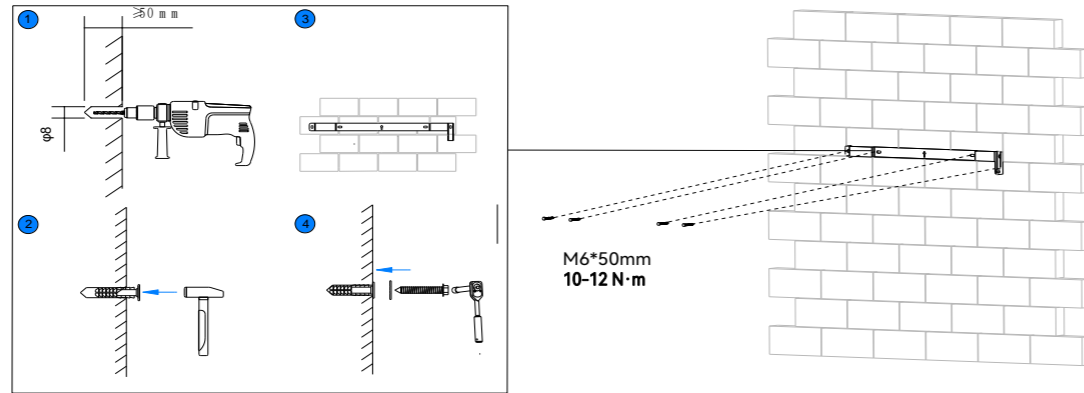


Figure 4.6
Secure the panel

4. Mount the inverter to the plate. Secure the inverter. (M5*12mm screw; 1.0-1.2 N·m)

Make sure that the rear part of the equipment is closely mounted into the rear panel.


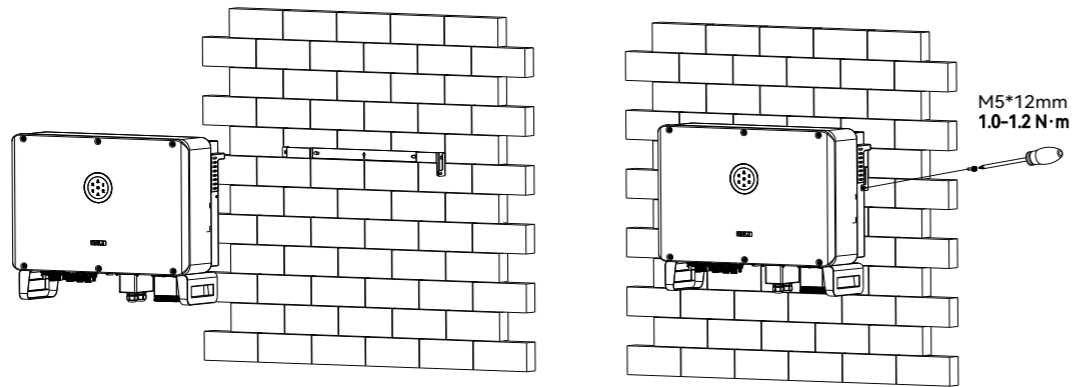


Figure 4.7
Mount the inverter




5.

ELECTRICAL CONNECTION

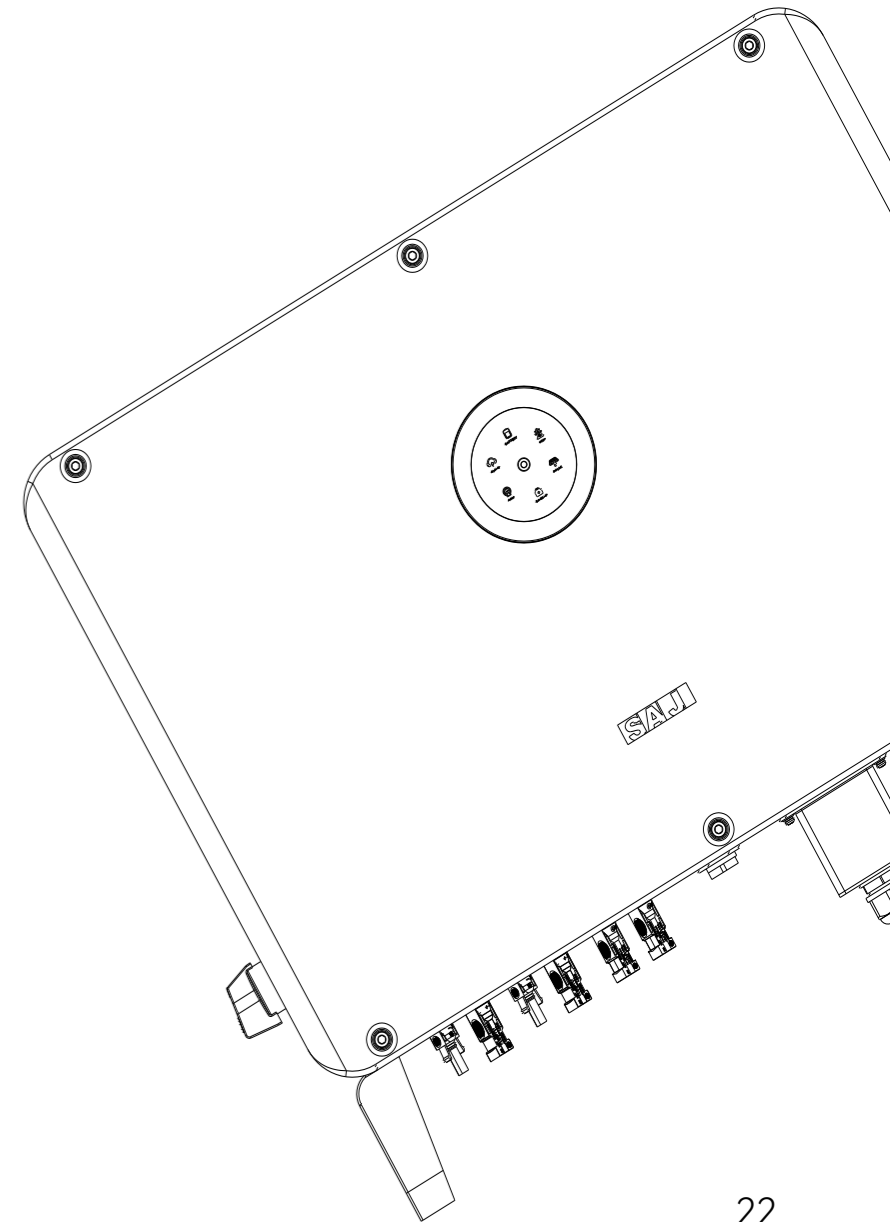

5.1 Additional Grounding Cable

Electrical connection must only be operated by professional technicians. Before connection, necessary protective equipment must be employed by technicians, including insulating gloves, insulating shoes and safety helmet.

 WARNING
· Connect this additional grounding cable before other electrical connection.

Note: The additional cable and OT/DT terminal should be prepared by user themselves.

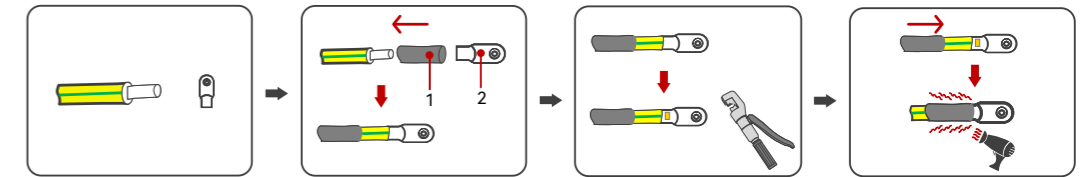


Figure 5.1
Preparing additional grounding cable

1. Heat shrink tubing 2. OT/DT terminal

Remove the screw of grounding terminal and secure the additional grounding cable by insert a screw into the screw hole in the OT/DT terminal. Connect the grounding cables as the following diagram.

Note: A 6 mm² conductor cross-sectional area of cable is recommended for additional grounding cable.

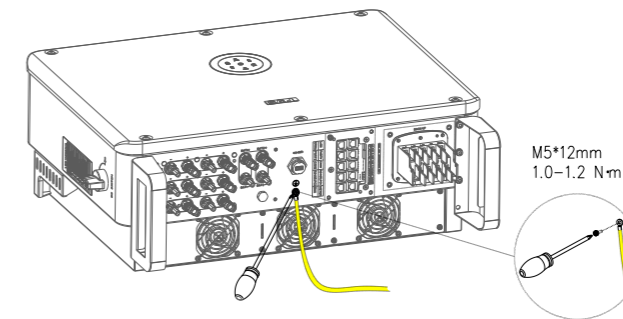


Figure 5.2
Connecting the additional grounding cable

5.2 AC Grid Wire and Backup Output Connection

Type	Cable cross-sectional area (mm ²)	
	Range	Recommend
H2-(10K-30K)-(T2,T3)	10~16	16
Additional grounding cable cross-sectional area (mm ²): 8		

Table 5.1
Recommended specifications of AC cables

Note: If the grid-connection distance is too far, please select an AC cable with larger diameter as per the actual condition.

Procedure:

Step 1: Open the waterproof cover, feed the AC cable through the AC waterproof hole.



Figure 5.3
Thread the cables

Step 2: Connect the cables to the conductors L1, L2, L3, N, and PE. Secure the waterproof cover to the inverter. (M4*10mm screw; 0.6-0.9 N·m)

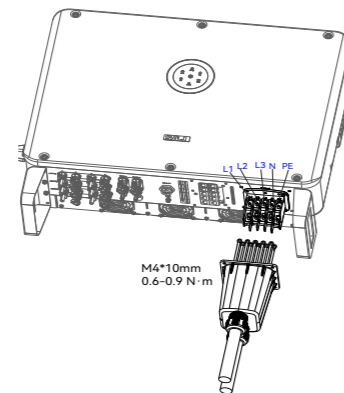


Figure 5.4
Connect the Cables

Step 3: Tighten the nut back to the cable gland.

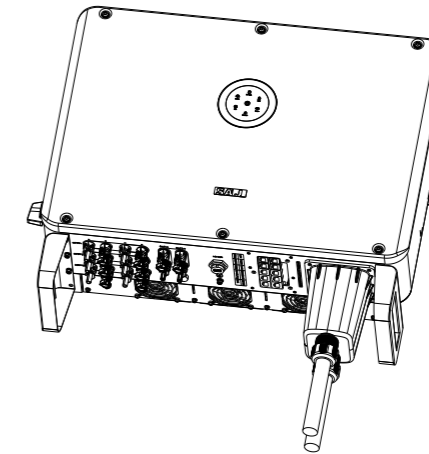


Figure 5.5
Screw the Connector

Step 4: During off grid operation time, PE line at the BACK-UP end will remain to be connected with the PE line at the power grid end inside the inverter. (Only applicable to market in Australia)

5.2.1 Earth Fault Alarm

This inverter complies with IEC 62109-2 clause 13.9 for earth fault alarm monitoring. If an earth fault alarm occurs, the ring light on the inverter LED panel will be lit up in red and an error code <31> can be viewed on the eSAJ Home App.

Note: The inverter cannot be used with functionally earthed PV Arrays.

5.2.2 External AC Circuit Breaker and Residual Current Device

Please install a circuit breaker to ensure the inverter is able to disconnect from grid safely. The integrated leakage current detector of inverter is able to detect the real time external current leakage. When a leakage current detected exceeds the limitation, the inverter will be disconnected from grid quickly.

The inverter does not require an external residual current device, as it has integrated with a RCMU. If local regulations require the application of external residual current device, either type A or type B RCD is compatible with the inverter. The action current of external residual current device should be 300mA.

Inverter type	Recommended breaker specification
H2-(10K-20K)-(T2,T3)	50A
H2-(25K-30K)-T3	63A
Notice: Do not connect multiple inverters to one AC circuit breaker.	

Table 5.2
Recommended circuit breaker specification

CAN1/CAN2		PART1/ PART2		LAN	
1	NC	1	CANH PAR	1	TX+
2	NC	2	CANL PAR	2	TX-
3	NC	3	NC	3	RX+
4	CANH	4	SYN-BUS+	4	NC
5	CANL	5	NC	5	NC
6	NC	6	HOST-BUS+	6	RX-
7	NC	7	NC	7	NC
8	NC	8	TRF-BUS+	8	NC

5.3 Communication Connection

- Note: 1) Confirm that the DC switch is OFF during installation to avoid short circuit caused by wrong operation during battery wiring.
2) Please use the battery cable in original package.



Figure 5.6
Pinout of RJ45

EMS/METER		RS485_PC1/RS485_PC2		DRM	
1	NC	1	NC	1	DRM1/5
2	NC	2	NC-	2	DRM2/6
3	NC	3	NC	3	DRM3/7
4	NC	4	NC	4	DRM4/8
5	NC	5	NC	5	RefGen
6	NC	6	NC	6	Com/DRM0
7	RS485-A	7	RS485-A	7	V+
8	RS485-B	8	RS485-B	8	V-

Thread the communication cable through the waterproof cable gland and connect to the corresponding port. Tighten screws to secure the waterproof cover to the inverter. (M4*10mm screw; 0.6-0.8 N·m)

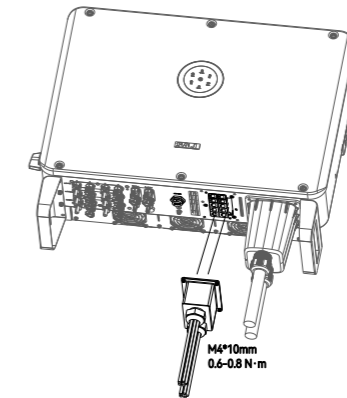


Figure 5.7
Communication cable connection

5.4 Connecting Battery Power Cable



- Power off the battery system before connecting the power cable to avoid high voltage danger
- The electrical connection of high voltage battery systems must be operated by qualified technicians in accordance with local and national power grid standards and regulations.

5.5 Battery Connection

If lithium battery is connected, it is not required to install a breaker between battery and inverter.

Cable Cross-sectional area (mm ²)	
Range	Recommend
8~10	8

Table 4.3
Recommended specifications of DC cables

1. Get the waterproof cover from the accessory bag and cut holes in the rubber plug. Insert the positive and negative cables through the hole.
2. On both cables, use a 3-mm wide-bladed screwdriver to strip the insulation layer around 8 to 10 mm length from one cable end.
3. Insert the cable ends to the corresponding sleeves. Use a crimping plier to assembly the cable ends.
4. Insert the assembled cable ends into the blue positive and negative battery connectors. Then, gently pull the cables backwards to ensure that they are firmly connected.
5. Tighten the nuts on the positive and negative cable connectors.

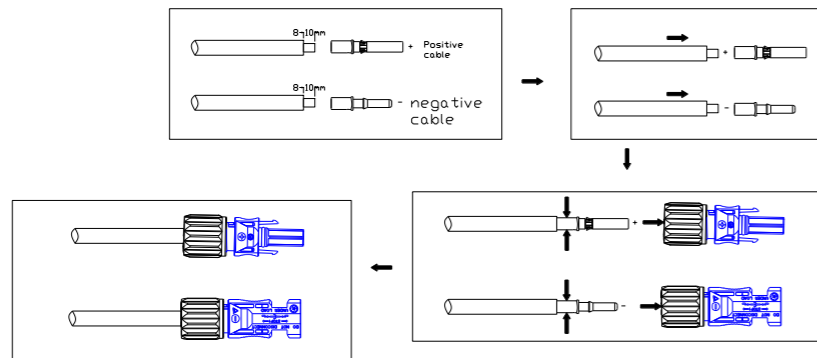


Figure 5.8
Battery Terminal

6. Fix the battery cable on the battery copper terminal by positive and negative in order.

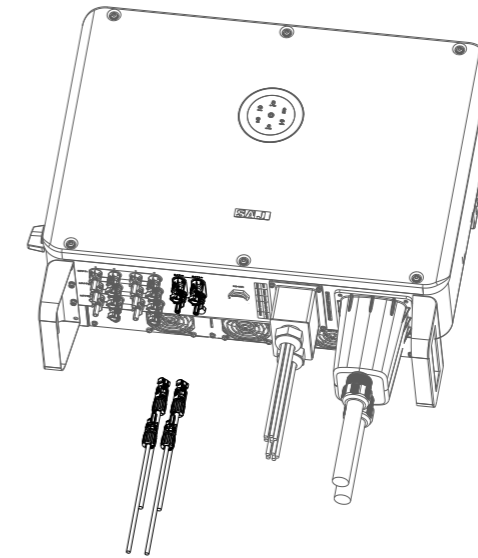


Figure 5.9
Connecting battery power cables

5.6 PV Side Connection


WARNING

· Make sure the PV array is well insulated to ground before connecting it to the inverter.

Conductor cross-sectional area of cables (mm ²)		Conductor material
Scope	Recommended value	
4.0~6.0	4.0	Outdoor multi-core copper wire cable, complying with 1000Vdc

Table5.4
Recommended specifications of DC cable


5.6.1 PV Connector Assembly

 WARNING
<p>Dangerous to life due to electric shock when live components or DC cables are touched.</p> <ul style="list-style-type: none"> · The PV panel string will produce lethal high voltage when exposed to sunlight. Touching live DC cables results in death or lethal injuries. · DO NOT touch non-insulated parts or cables · Disconnect inverter from voltage sources. · DO NOT disconnect DC connectors under load. · Wear suitable personal protective equipment for all work.

DC connector is made up of positive connector and the negative connector



Figure 5.10
Positive connector
& Negative connector

 NOTICE
<ul style="list-style-type: none"> · Please place the connector separately after unpacking in order to avoid confusion for connection of cables. · Please connect the positive connector to the positive side of the solar panels, and connect the negative connector to the negative side of the solar side. Be sure to connect them in right position.

Connecting Procedures:

1. Loosen the lock screws on positive and negative connector.
2. Strip the insulation of the positive and negative cables with 8-10mm length.

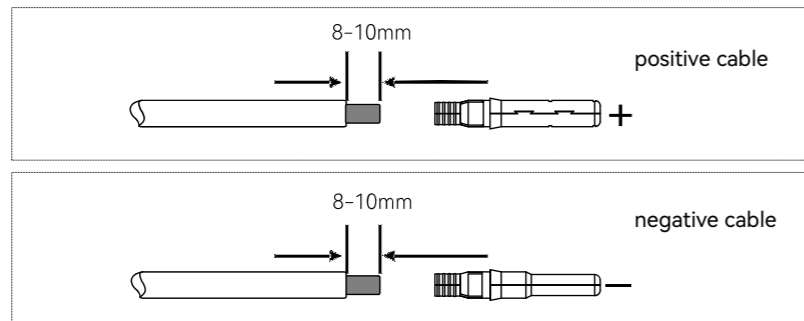


Figure 5.11
Stripping off the insulation skin of cables

3. Assembly the positive and negative cables with corresponding crimping pliers.

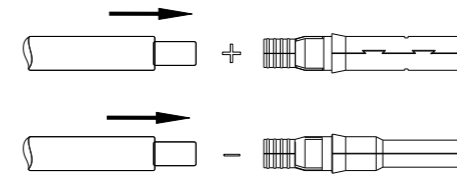


Figure 5.12
Inserting cables to lock screws

4. Insert the positive and negative cable into positive and negative connector. Gently pull the cables backward to ensure firm connection.

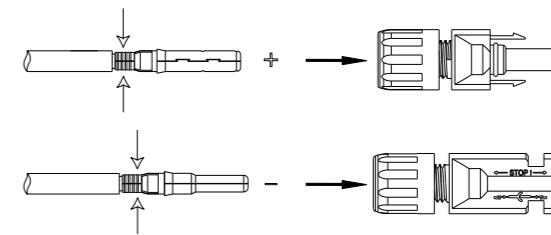


Figure 5.13
Inserting crimped cables to connectors

5. Fasten the lock screws on positive and negative connectors.




Figure 5.14
Securing the connectors

6. Make sure the DC switch is at OFF position

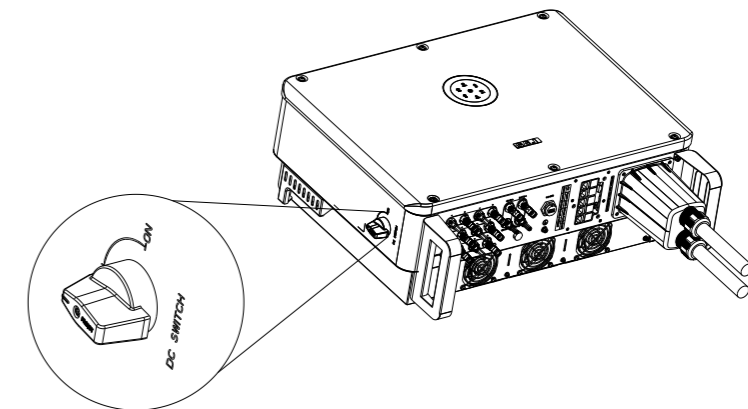


Figure 5.15
DC switch

7. Connect the positive and negative connectors into positive and negative DC input terminals of the inverter, a “click” should be heard or felt when the contact cable assembly is seated correctly.

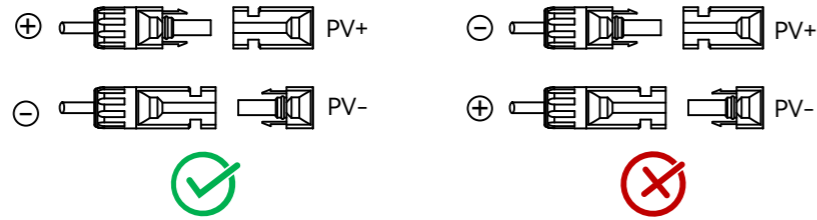


Figure 5.16
Plug in PV connectors

5.7 Communication Module Installation

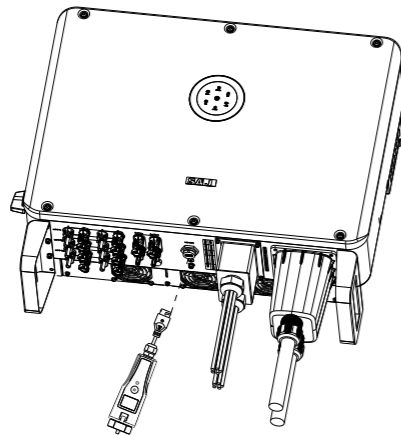



Figure 5.17
4G/WiFi port

Plug in the communication module to 4G/WIFI port and secure the module by rotating the nut.

1. 4G/Wi-Fi port could be externally connected with eSolar 4G module, eSolar Wi-Fi module or eSolar AIO3 module, for operation in details please refer to communication module Quick Installation Guide in <https://www.saj-electric.com/>.


5.8 System Connection

The system connection in Australia and New Zealand is as below, the neutral cable of AC and backup side must be connected together for the safety reason.
Note: DO NOT connect the PE terminal of BACKUP side.

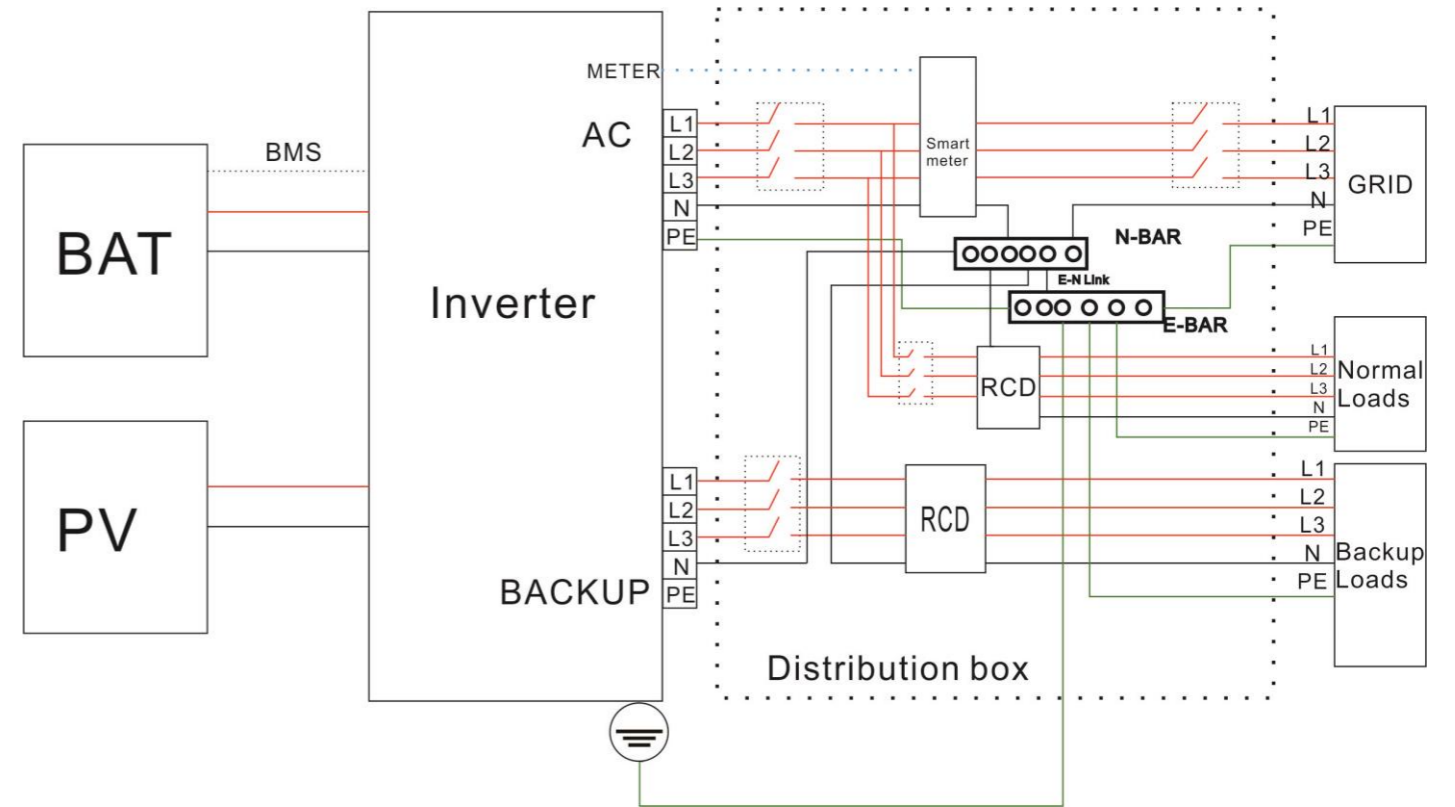


The system connection for grid system without special requirements is as below.

Note: The backup PE line and earthing bar must be grounded properly. Otherwise, backup function may be inactive during blackout.

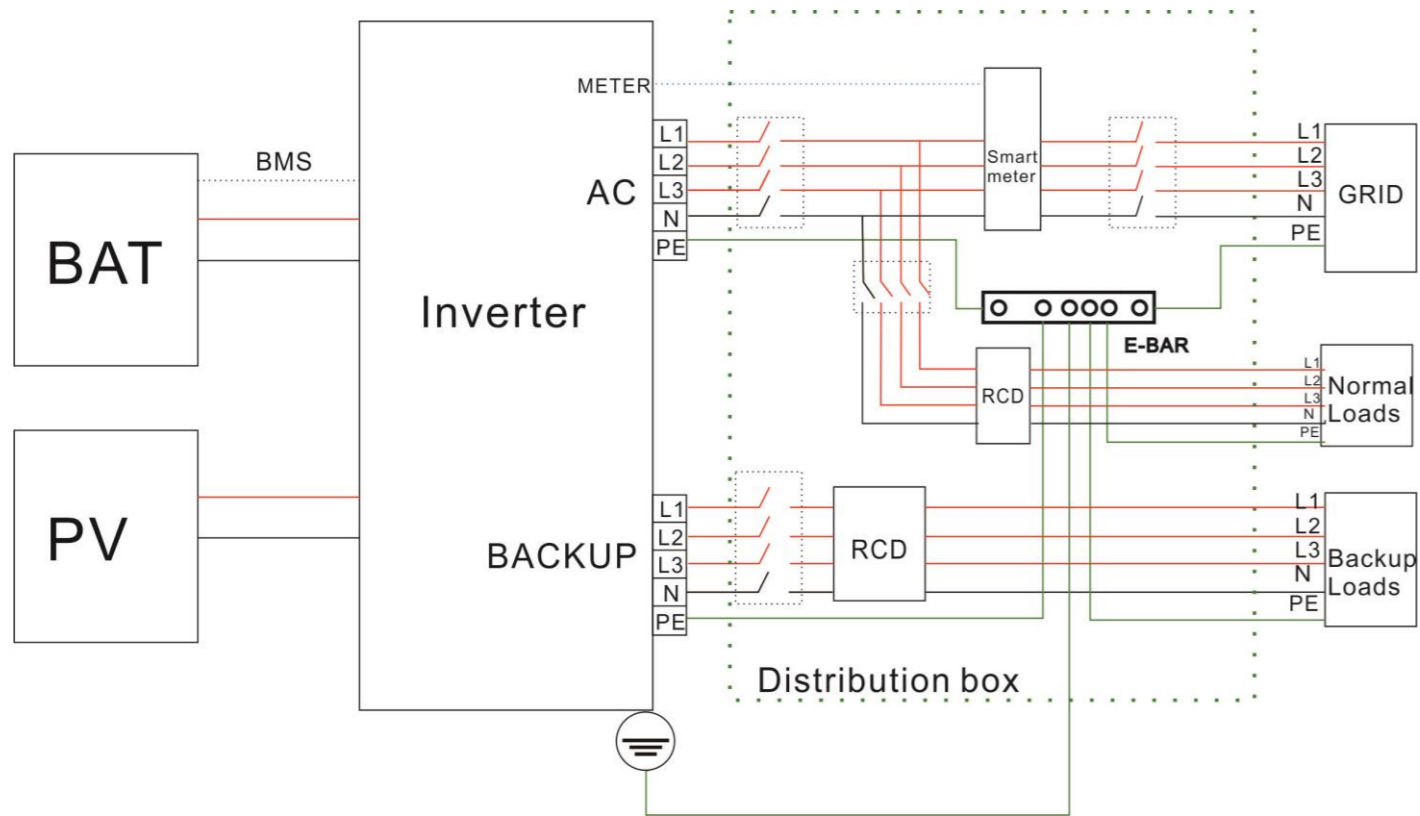

5.9 System Connection Diagram

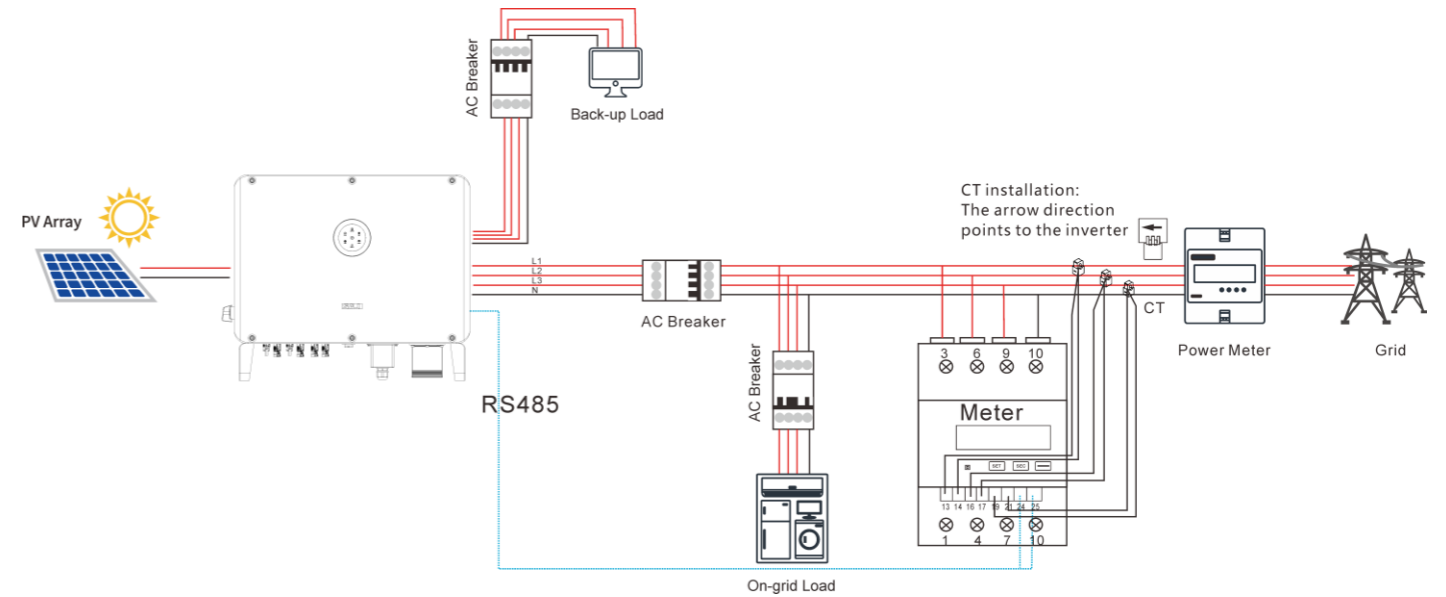

5.10 AFCI

The inverter is equipped with arc-fault circuit interrupter (AFCI). With AFCI protection, when there is an arc signal on the DC side due to aging of the cable or loose contact, inverter can quickly detect and cut off the power to prevent fire, making the PV system run more safely.

6.

COMMISSIONING



6.1 Start Up and Shut Down the Energy Storage System

6.1.1 Start Up

Step 1: Turn on the circuit breaker

Step 2: Press and hold the main switch for 2-3s, until the display is on

6.1.2 Shut Down

Automatically shut down, when the solar light intensity is not strong enough during sunrise and sunset or the output voltage of photovoltaic system is less than the minimum input power of inverter, inverter will shut down automatically.

Shut down manually, disconnect AC side circuit breaker first, if multiple inverters are connected, disconnect the minor circuit breaker prior to disconnection of main circuit breaker. Disconnect the DC switch after inverter has reported grid connection lost alarm.

6.2 Introduction of Human-Computer Interface

System commissioning

After the wiring is completed, please refer to the inverter manual for system commission and operation.

Note: Turn on the circuit breaker and main switch when using battery.

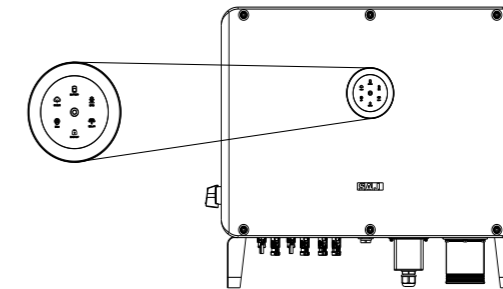













Figure 6.1
Human-computer interface

LED indicator	Status	Description
	LED off	Inverter power off
	Breathing	Inverter is at initial state or standby state
	Solid	Inverter running properly
	Breathing	Inverter is upgrading
	Solid	Inverter is faulty not working properly
 System	Solid	Importing electricity from grid
	On 1s, off 1s	Exporting electricity to grid
	On 1s, off 3s	Not importing and exporting at all
	Off	Off-grid
 Battery	Solid	Battery is discharging
	On 1s, off 1s	Battery is charging
	On 1s, off 3s	SOC low
	Off	Battery is disconnected or inactive
 Grid	Solid	Connected to grid
	On 1s, off 1s	Counting down to grid connection
	On 1s, off 3s	Grid is faulty
	Off	No grid
 PV	Solid	PV array is running properly
	On 1s, off 1s	PV array is faulty
	Off	PV array is not operating
 Backup	Solid	AC side load is running properly
	On 1s, off 1s	AC side load overload
	Off	AC side is turned off
	Solid	Both BMS and meter communication are good
	On 1s, off 1s	Meter communication is good, BMS communication is lost
	On 1s, off 3s	Meter communication is lost, BMS communication is good


LED indicator	Status	Description
Communication	Off	Both meter and BMS communication are lost
 Cloud	Solid	Connected
	On 1s, off 1s	Connecting
	Off	Disconnected

Table 6.1
Interface description

Note: One breathing cycle is 6 seconds.

6.3 Installing the eSAJ Home App


The eSAJ Home App can be used for both nearby and remote monitoring. It supports Bluetooth/4G or Bluetooth/Wi-Fi to communicate with the device.

On your mobile phone, search for “eSAJ Home” in the App store and download the App.


6.4 Logging In to the App and Performing the Initialization Settings

1. Log in to the App by using one of the following manners:

- **Account Login**

- Open the App and click on the three-dot icon  on the top right corner. Set the **Language** to **English** and **Network Node** to **Overseas Node**. Then, use your account to log in to the App.


If you do not have an account, register first.

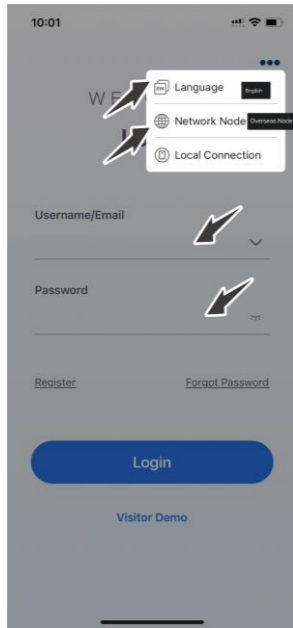


b. Go to the **Tool** interface and select **Remote Configuration**. Click on **Bluetooth** and enable the Bluetooth function on your mobile phone. Then, click on **Next**.

2. Choose your inverter according to your inverter SN. Click on the inverter to enter inverter settings.
3. Complete the inverter settings by following the instructions on the screen.


Example:

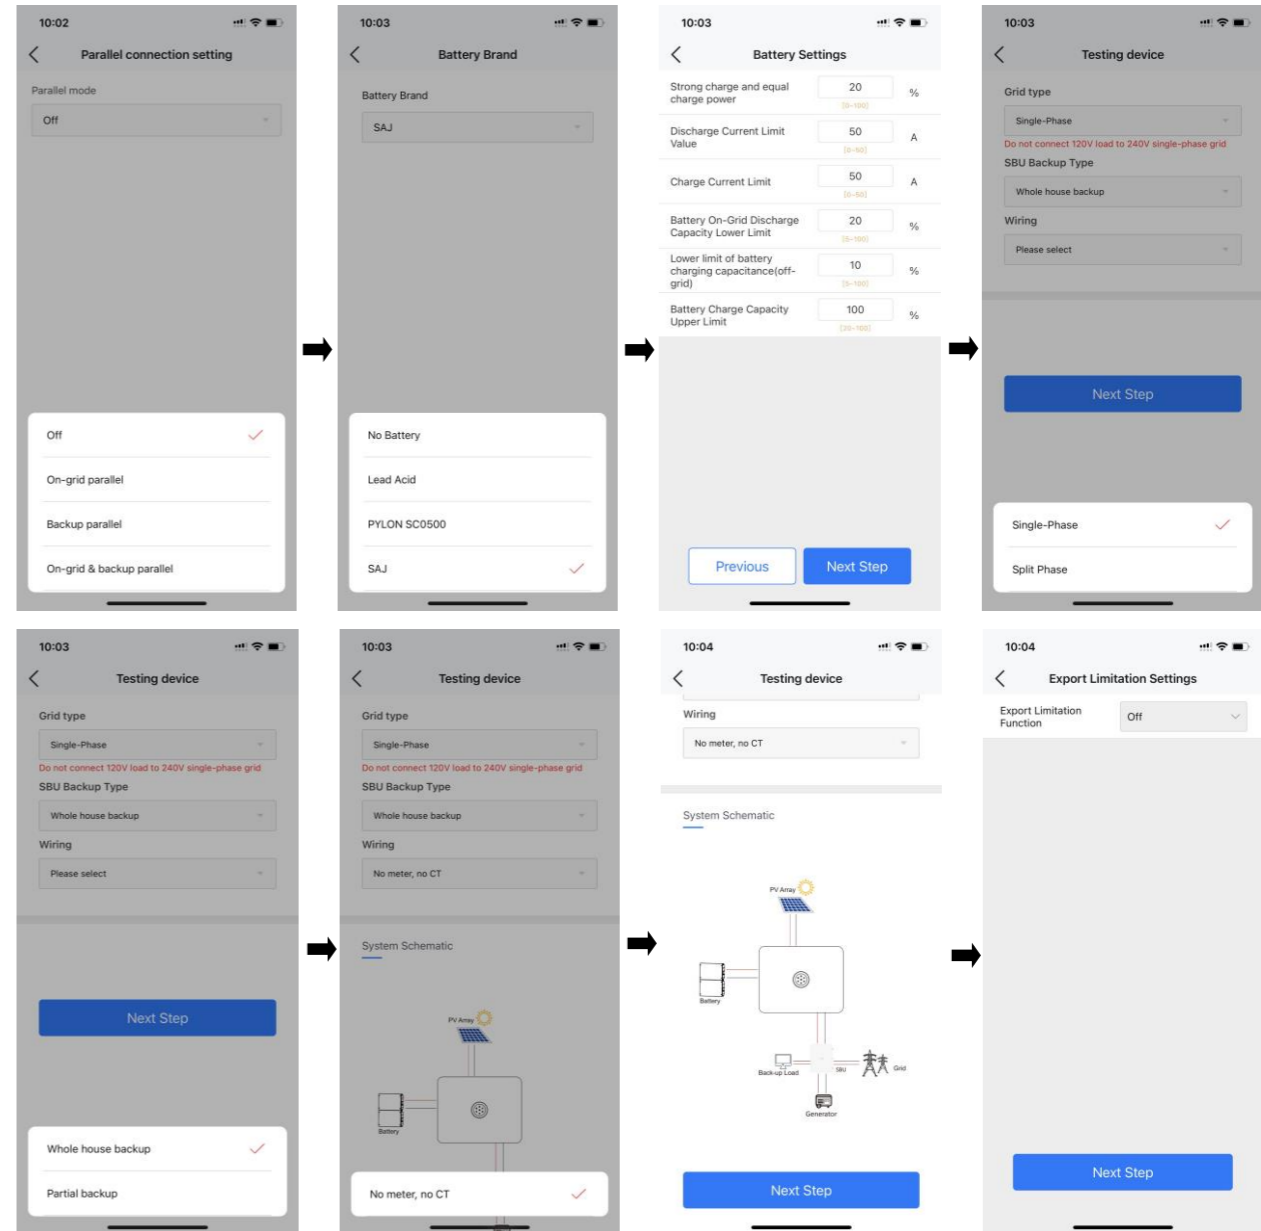

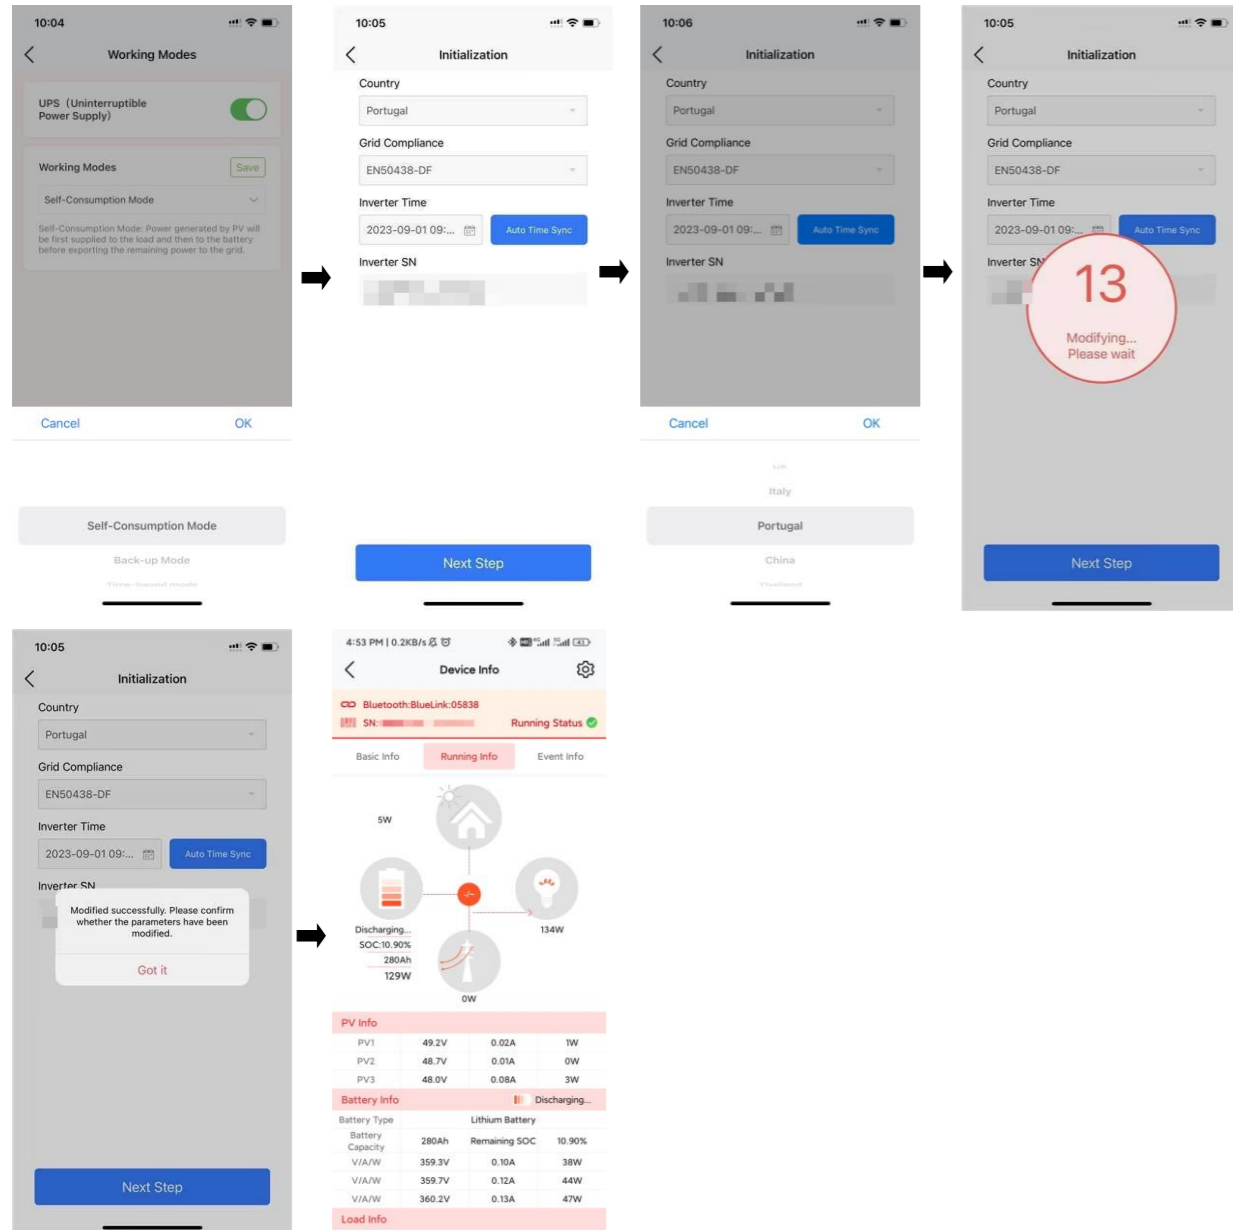

6.5 Inverter Setting Review

After commissioning, the device info including device basic info, running info and event info can be viewed. Country and grid code can be viewed from initial setting.

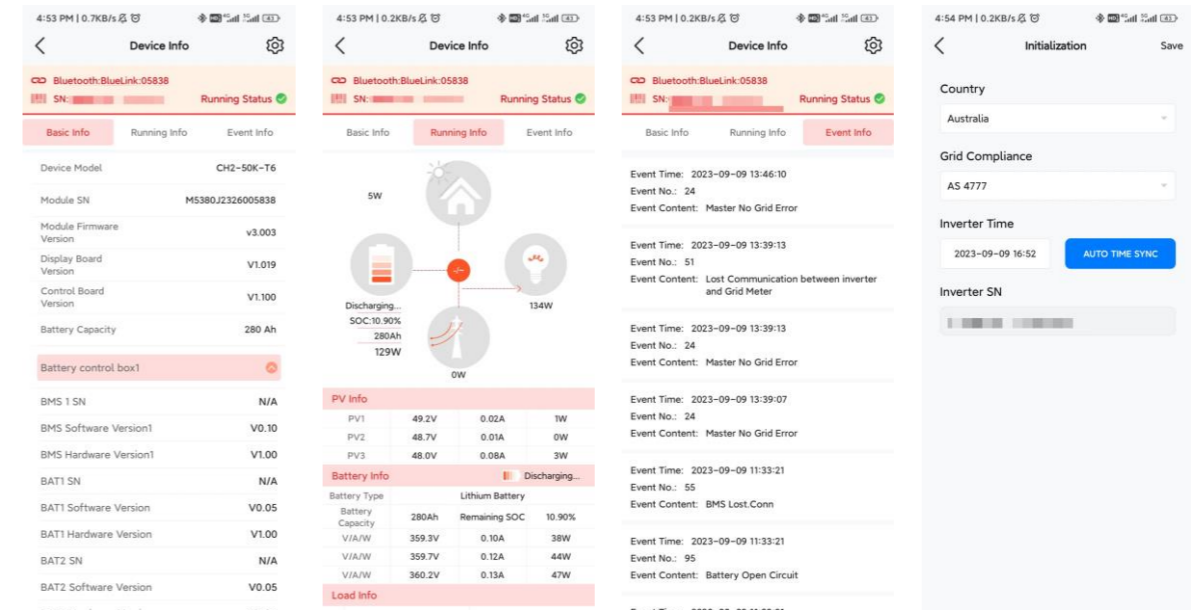


6.6 Remote Monitoring

Connect the internet via the eSolar AIO3 module, and upload the inverter data onto the server and customers could monitor running information of the inverter remotely via the eSolar Web Portal or their mobile customer terminals.

6.7 Working Modes

6.7.1 Selecting Working Modes Procedures

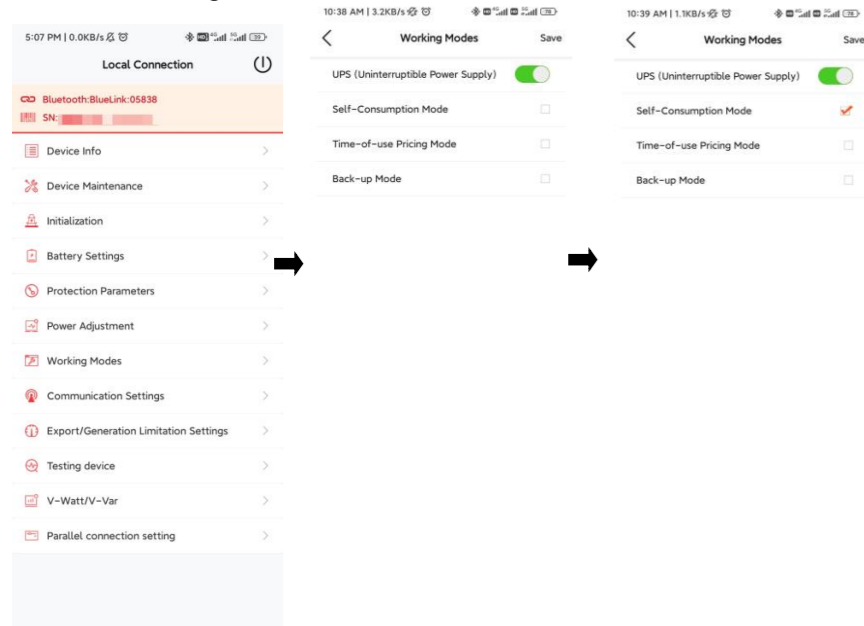


6.7.2 Working Modes Introduction

Self-consumption Mode: When the solar is sufficient, electricity generated by photovoltaic system will be supplied to load first, the surplus energy will be stored in battery, then the excess electricity will be exported to the grid. When the solar is insufficient, the battery will release electricity to supply load.


Back-up Mode: Reserved Backup SOC setting value can be adjusted, when battery SOC is less than reserved SOC value, battery can only be charged, until SOC reaches reserved value, the battery will be stopped charging; when SOC is larger than SOC setting value, battery will behave as Self-use mode.

Time-of-use Mode: Battery charging period and discharging period can be set, during charging period, battery can only be charged, while in discharging period, battery can only be discharged, the rest of the period, battery will behave as Self-use mode.

6.8 Export Limit Setting

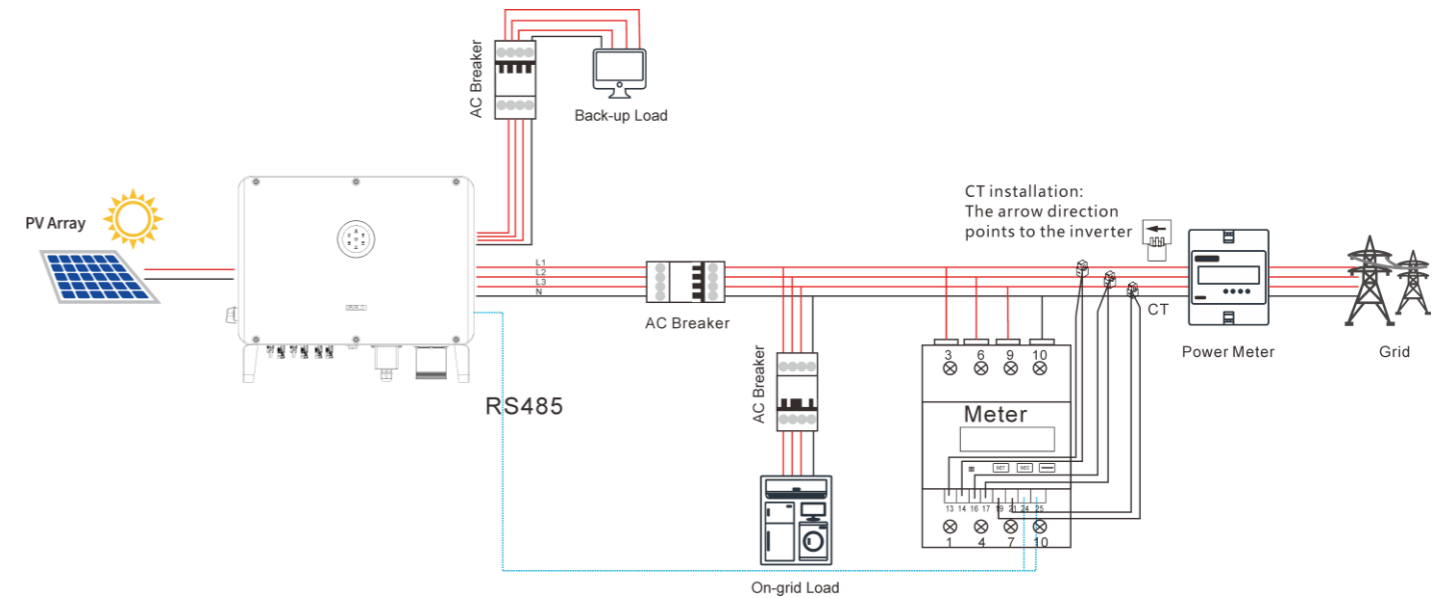

6.8.1 APP Setting

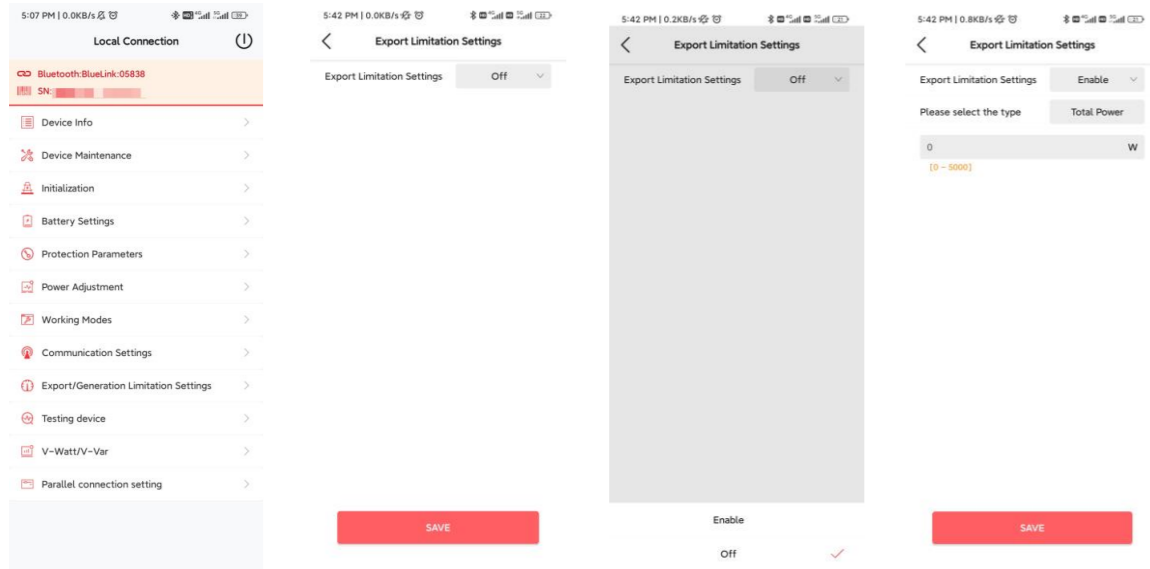

There are two methods to control the export limit, the two methods are alternative to each other.

Method 1: Export limitation setting is to control the export electricity to the grid.

Method 2: Generation limit is to control the electricity generated by the inverter.

6.9 Self-test (For Italy)


Italian Standard CEI0-21 requires a self-test function for all inverter that connected to utility grid. During the self-testing time, inverter will check the reaction time for over frequency, under frequency, overvoltage and undervoltage. This self-test is to ensure the inverter is able to disconnect from grid when required. If the self-test fails, the inverter will not able to feed into the grid.

The steps of running Self-test are as followed:


Step 1: Connect a communication module (Wi-Fi/ 4G/Ethernet) with inverter (connection procedure can

refer to eSolar Module Quick Installation Manual)

Step 2: Select Italy for Country and choose your corresponding Grid Code from Initial Setting.

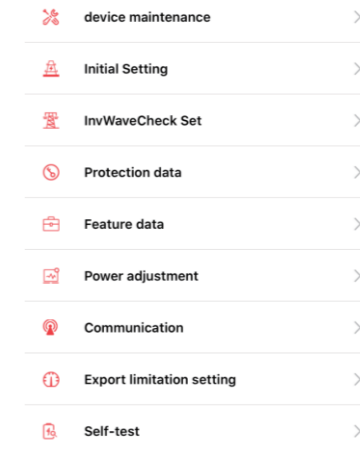


Step 3: You can choose self-test item required. Individual self-test time is approx. 5 minutes. All self-test time is approx. 40 minutes. After the self-test is completed, you can save the test report. If self-test is failed, please contact with SAJ or your inverter supplier.

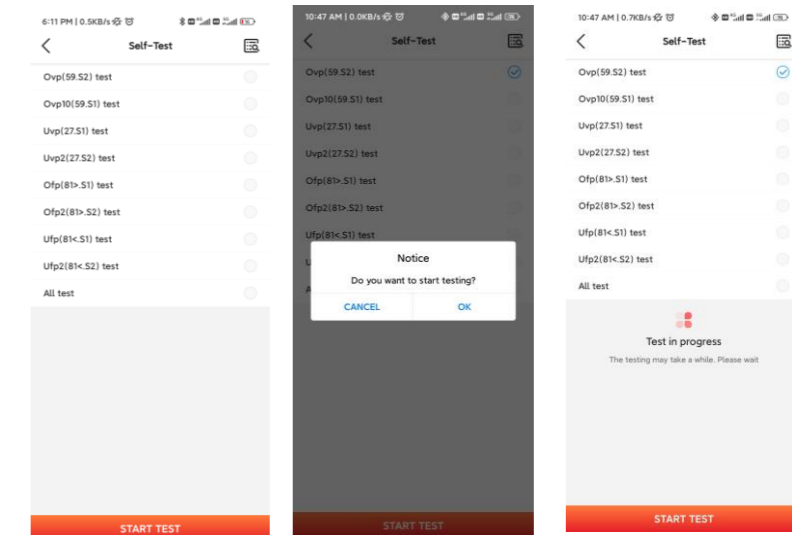

6.10 Setting Reactive Power Control (For Australia)

6.10.1 Setup Fixed Power Factor Mode & Fixed Reactive Power Mode


Fixed Power Factor Mode

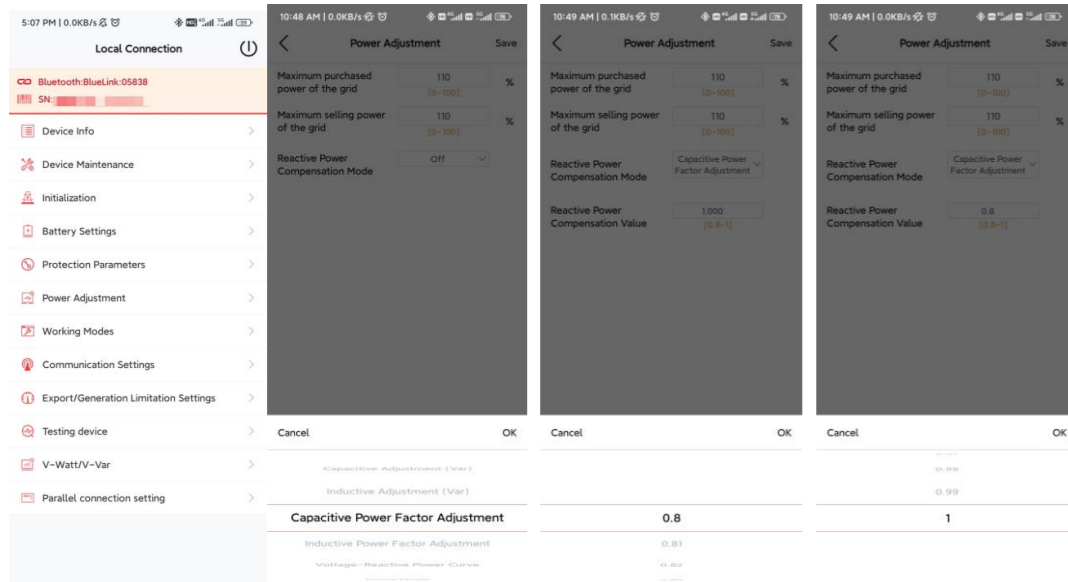

Step 1: Select Power Adjustment and enter password "201561" .

Step 2: Select Capacitive Power Factor or Inductive Power Factor according to your local grid regulation. The power factor range is from 0.8 leading ~ 0.8 lagging.

Fixed Reactive Power Mode

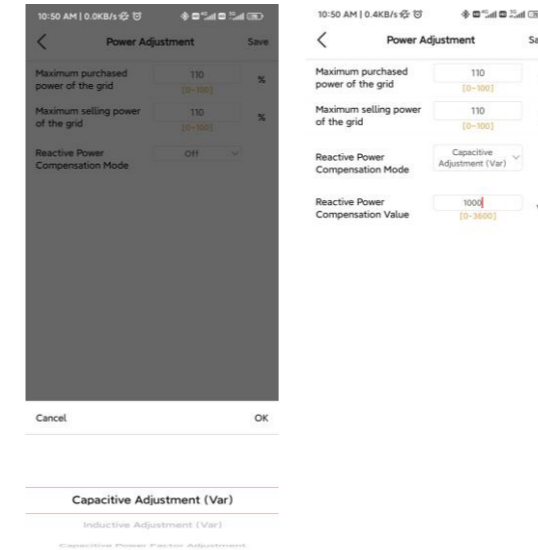

Step 1: Select Inductive Adjustment Var or Capacitive Var according to your local grid regulation. The power range is from -60%Pn ~ 60%Pn.

6.10.2 Setup V-Watt and Volt-Var Mode

This inverter complies with AS/NZS 4777.2: 2020 for power quality response modes. The inverter satisfies different regions of DNSPs' grid connection rules requirements for volt-watt and volt-var Settings. e.g.: AS4777 series setting as below Fig 6.2&6.3.

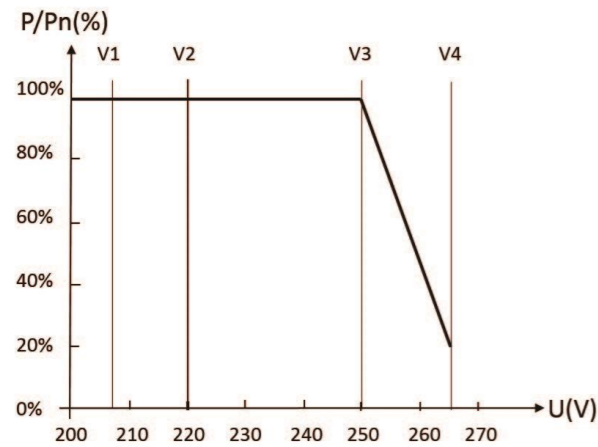


Figure 6.2

Curve for a Volt-Watt response mode (AS4777 Series)


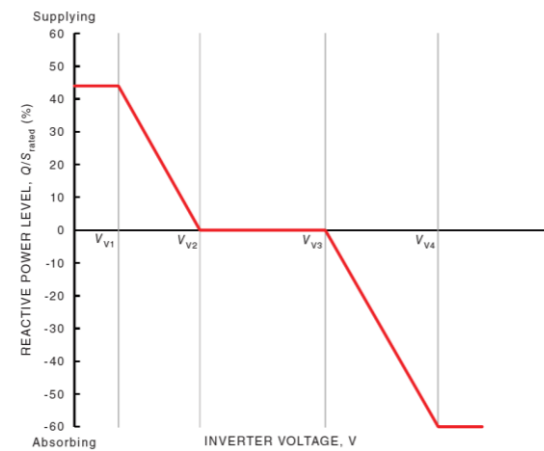


Figure 6.3

Curve for a Volt-Var control mode (AS4777 Series)

Setting procedure:

1. AS4777 grid compliance has been set during production, please select corresponding grid compliance according to state regulation during installation. You can choose a state regulation compliance with your local grid via eSAJ Home.
2. Log in to eSAJ Home, click "Local Connection", for connection procedure please refer to chapter 5.3 for Nearby monitoring.
3. Click "V-Watt/V-Var" to enter DNSPs settings, choose a suitable state regulation from the drop down list.

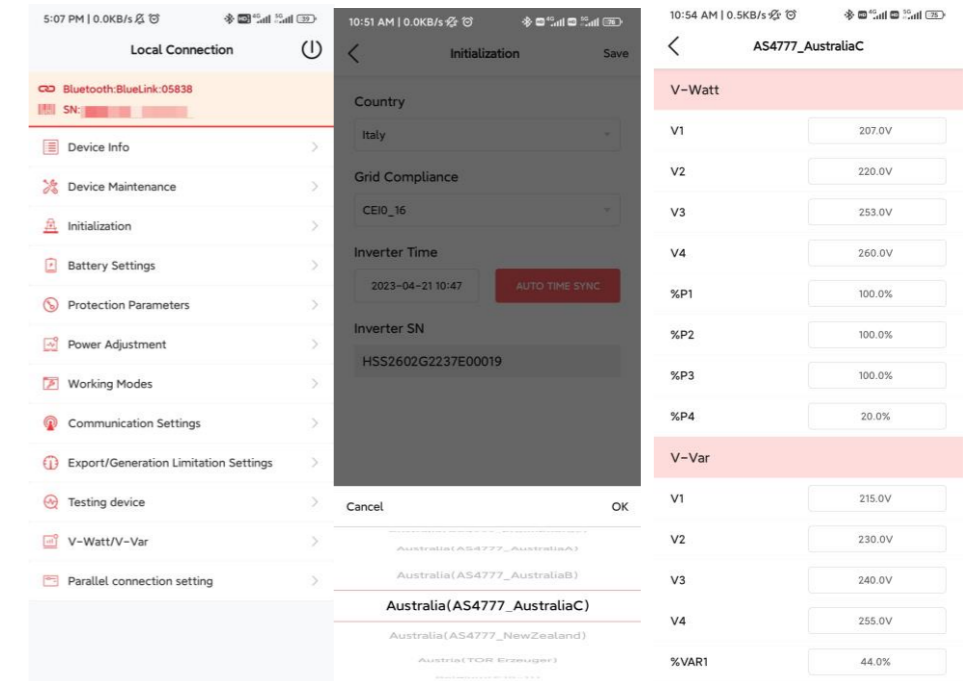

Note:

With regard to the Power rate limit mode, SAJ sets the product WGr_a to 16.67%P_n by default in the following cases according to the requirements of 3.3.5.2 as 4777.2: 2020.

1. Soft ramp up after connect.
2. Reconnect or soft ramp up/down following a response to frequency disturbance.

7.

TRANSPORTATION & DISPOSAL




7.1 Transportation

Take care of the product during transportation and storage, keep less than 5 cartons of inverter in one stack.

7.2 Recycling and Disposal



This device should not be disposed as residential waste. An inverter that has reached the end of its life and is not required to be returned to your dealer, it must be disposed carefully by an approved collection and recycling facility in your area.

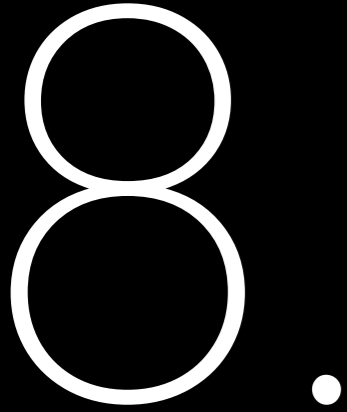

ROUTINE MAINTENANCE



Inverter Cleaning

Clean the enclosure lid and LED indicator of the inverter with moistened cloth with clear water only. Do not use any cleaning agents as it may damage the components.

Heat Sink Cleaning

Clean the heat sinks with dry cloth or air blower. Do not clean the heat sink with water or cleaning agents. Make sure there is enough space for ventilation of inverter.



TROUBLESHOOTING & WARRANTY



Troubleshooting

Code	Fault Information
1	Master Relay Error
2	Master EEPROM Error
3	Master Temperature High Error
4	Master Temperature Low Error
5	Lost Communication M<->S
6	GFCI Device Error
7	DCI Device Error
8	Current Sensor Error
9	Master Phase1 Voltage High
10	Master Phase1 Voltage Low
11	Master Phase2 Voltage High
12	Master Phase2 Voltage Low
13	Master Phase3 Voltage High
14	Master Phase3 Voltage Low
15	Grid Voltage 10Min High
16	OffGrid Output Voltage Low
17	OffGrid Output Short Circuit
18	Master Grid Frequency High
19	Master Grid Frequency Low
20	BATInputMode Error
21	Phase1 DCV High
22	Phase2 DCV High
23	Phase3 DCV High
24	Master No Grid Error
25	DC ReverseConnect Error
26	Parallel machine CAN Com Error
27	GFCI Error
28	Phase1 DCI Error
29	Phase2 DCI Error
30	Phase3 DCI Error
31	ISO Error
32	Bus Voltage Balance Error
33	Master Bus Voltage High

Code	Fault Information
34	Master Bus Voltage Low
35	Master Grid Phase Lost
36	Master PV Voltage High
37	Master Islanding Error
38	Master HW Bus Voltage High
39	Master HW PV Current High
40	Master Self-Test Failed
41	Master HW Inv Current High
42	Master AC SPD Error
43	Master DC SPD Error
44	Master Grid NE Voltage Error
45	Master Fan1 Error
46	Master Fan2 Error
47	Master Fan3 Error
48	Master Fan4 Error
49	Lost Communication between Master and Meter
50	Lost Communication between M<->S
51	Lost Communication between inverter and Grid Meter
52	HMI EEPROM Error
53	HMI RTC Error
54	BMS Device Error
55	BMS Lost.Conn
56	CT Device Err
57	AFCI Lost Err
58	Lost Com. H<->S Err
59	Lost Communication between inverter and PV Meter
61	Slave Phase1 Voltage High
62	Slave Phase1 Voltage Low
63	Slave Phase2 Voltage High
64	Slave Phase2 Voltage Low
65	Slave Phase3 Voltage High

Code	Fault Information
66	Slave Phase3 Voltage Low
67	Slave Frequency High
68	Slave Frequency Low
73	Slave No Grid Error
74	Slave PV Input Mode Error
75	Slave HW PV Curr High
76	Slave PV Voltage High
77	Slave HW Bus Volt High
81	Lost Communication D<->C
83	Master Arc Device Error
84	Master PV Mode Error
85	Authority expires
86	DRM0 Error
87	Master Arc Error
88	Master SW PV Current High
89	Battery Voltage High
90	Battery Current High
91	Battery Charge Voltage High
92	Battery OverLoad
93	Battery SoftConnet TimeOut
94	Output OverLoad
95	Battery Open Circuit Error
96	Battery Discharge Voltage Low

Please contact your supplier for troubleshooting and remedy.

Warranty

Please go to SAJ website for warranty conditions and terms
<https://www.saj-electric.com/>